
Setup Instructions BrandStand 1 & 2™

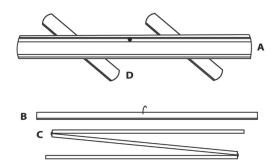

- A Display Base Unit
- B Snap-Lock Profile
- C Tri-Fold Pole
- D Stabalizing Feet






Turn stabalizing feet to 90° angle.




Assemble 3 piece pole and insert into hole located on the base.



Pull graphic out of base and fasten hook into top of pole.

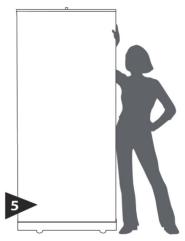


Place display into position. To close, unfasten top hook and firmly grip while gently retracting.

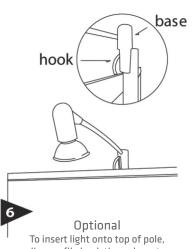

align profile hook through center groove of light base.

 Graphic Installation BrandStand 1 & 2™



CAUTION:

Do not remove the locking pin until the profile is attached to the graphic and the graphic is attached to the leader.




Pull graphic out until the leader is exposed. Insert locking pin to disable the roller.




Once the snap-lock profile is open, insert top portion of graphic into profile.



Remove graphic and attach new one. Place clear packaging tape over seam.

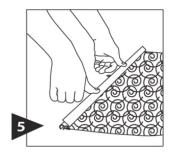

Apply even pressure to the snap-lock profile to lock graphic into place.

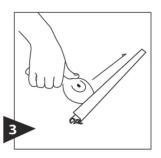

Use the edge of Re-Tension Tool to open the snap-lock profile.




Grip image and unit securely and remove locking pin. Slowly guide image back into unit.


Re-Tensioning Instructions Please note that feet should be open, the pole inserted and the banner attached to the top of pole in full display view.



Face back of unit with the pole slot closest to you. Use the edge of the Re-Tension Tool to gently pop off the cover on the right side of unit.

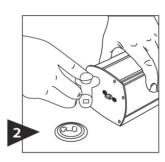

Guide the slot of Re-Tension Tool over the exposed metal pin. Move pin from lock position into center circle. The pin can now turn for re-tensioning.

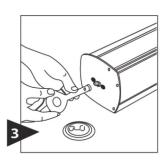

Holding tool firmly, twist clock-wise to re-tension. Wind 33 full turns. Return pin back to lock position. Replace cover.