




Parts List

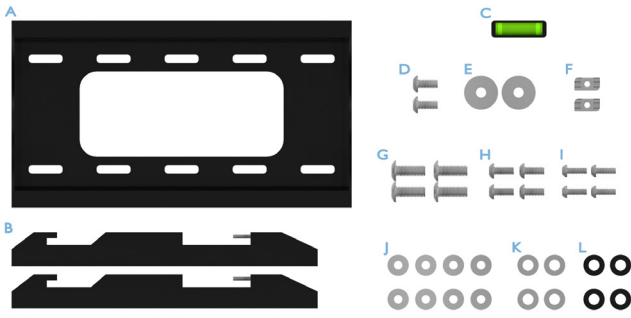


- A.) x1 MM2 Mount
- B.) x2 MM2 TV Rails
- C.) x1 Level Clip
- D.) x2 1/2" Buttonheads
- E.) x2 1/4" Washers
- F.) x2 T-nuts
- G.) x4 M6 x 20mm
- H.) x4 M5 x 12mm
- I.) x4 M4 x 12mm

- J.) x4 20mm Spacers
- K.) x4 20mm Washers
- L.) x8 12mm Washers


Tools Required

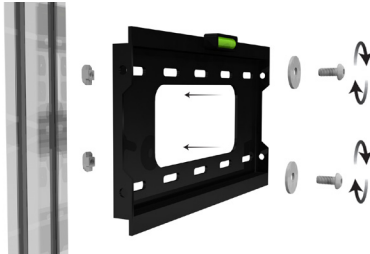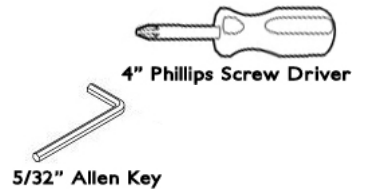


Step 1. Insert x2 1/2" Buttonhead screws through MM2 Mount; attach t-nuts.

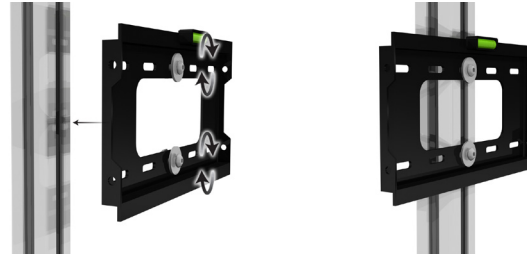


Step 2. Insert t-nuts into Exhibit extrusion channel. Tighten with 5/32" allen key to secure.

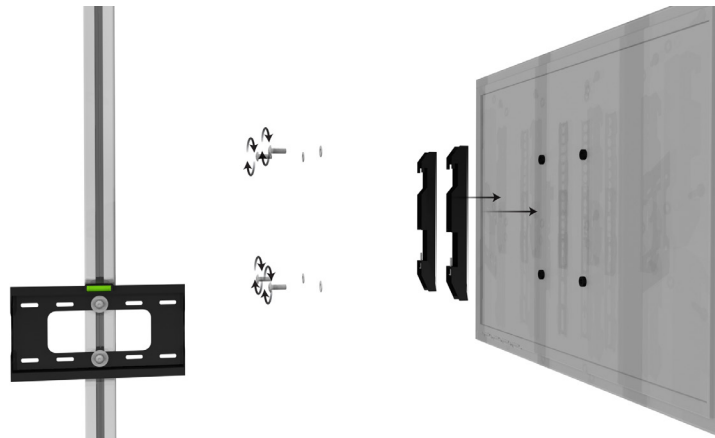


Step 3. Mount TV Rails to back of TV. Make sure the TV Rails are mounted at an equal distance from the top of the TV and as close to centered as possible. Choose M4 screw set that fits your needs.

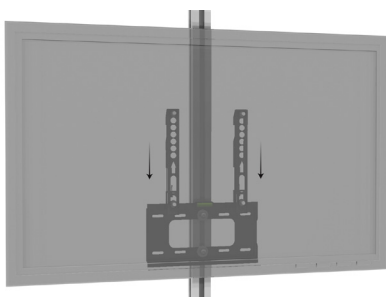

Step 4. First hook TV Rails over the top of the MM2 Mount.

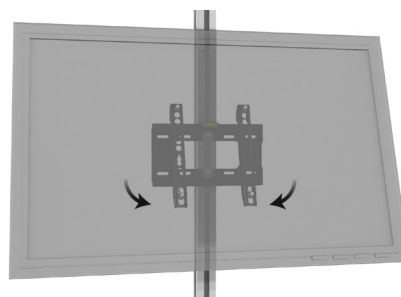

Step 5. Let bottom of the TV Rails rotate in under the bottom of the MM2 Mount.

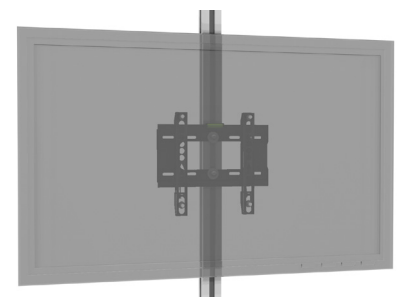

Complete.