Step 1. Attach legs to base using six M12 bolts. Tighten w/ 8mm hex key. (**do not over tighten**)



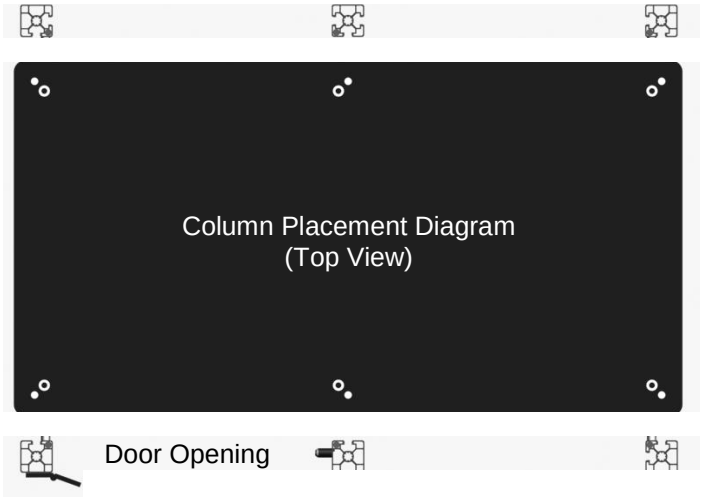

Step 2. Insert infill panels.



Step 3. Attach top using six M12 bolts. Tighten w/ 8mm hex key. (**do not over tighten**)



Step 4. Attach cabinet door using ¼”-20 x ½” button head cap screws. Tighten w/ 5/32” hex key. (**do not over tighten**)

